

U Hot Keyboard

The U Hot wireless washable keyboard is Man & Machine's answer for people who want a water-resistant wireless keyboard at an economical price. The U Hot is a less expensive alternative to our truly waterproof models. The U Hot has the same characteristics and feels as a standard desktop keyboard, and comes with all the passion, commitment and support that you expect with any of Man & Machine products.

Weight:

506 g (1.1 lb.)

Dimensions:

450.85 x 158.75 x 19.05 mm
(17.75" x 6.25" x 0.75")

Number of keys:

104 = US Layout with Windows™

Power:

Rechargeable battery.
3 volts (5 volts to charge)

System requirements:

USB interface for the wireless bridge

Operating Frequency:

2.4 GHZ RF digital radio, FHSS frequency-hopping technology

Warranty period:


One-year limited warranty

Specifications subject to change without notice

Pairing the U Hot Keyboard: (NO DRIVER NEEDED)

1. Connect the USB receiver bridge to the USB port on your PC.
2. Press the button located on the middle of the USB receiver bridge to initiate pairing.
3. Press both "Esc" and "Pause" keys on the keyboard at the same time for three seconds to turn on and pair the keyboard with the bridge. You can now use the keyboard.

(If the pairing fails or the keyboard does not respond, press the reset button on the back top right side of the keyboard.)

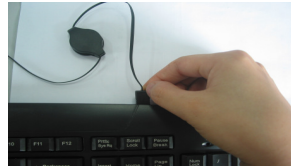

You can email us at: info@mmimd.com
or call us at: (301) 341-4900
In Europe, contact +31-23-5450185
www.man-machine.com



Charging the U Hot Keyboard:

- To charge the keyboard plug the USB A end to your PC and the mini USB B end to the top right side USB connector of the keyboard. USB Charger cable is included.

Battery status light:

- Middle LED lights up when charging.
- Right LED lights up when the battery is low.

Cleaning Instructions for U Hot Keyboard:

1. Clean the surface of the product by wiping, brushing or spraying. Use only rags, sponges or soft bristle brushes. **DO NOT place the USB connector into the fluid.**
2. Either wipe with dry cloth or allow to air dry.
3. Keyboard can also be rinsed. After cleaning, drain, and turn upside down on dry towel and allow to air dry.

Disinfectants recommended by Man & Machine, Inc.:

- **Chlorine based (max 10% solution)** - Chlorox, Novalsan, etc.
- **Formaldehyde based** - Formaldehyde Solution 37%, Vinco Formaldegen, etc.
- **Glutaraldehyde based** - Aldacide 200, Lysofume, Wavicide, etc.
- **Phenol based** - Lysol I.C., Beaucoup, Magna Clean, Tek-Trol, etc.
- **Alcohol based** - Cavicide, Isopropyl Alcohol, Medicide, etc.
- **Oxidizing** - Hydrogen Peroxide 3% Solution, Lifeguard Series, etc.
- **Quaternary Ammonium** - Roccal-D, Bacto-Sep, Parvosol, etc.
- **Soap and water**

DO NOT USE:

- **Petroleum based cleaning fluids, such as Gasoline**
- **Acetone**
- **Over 10% bleach solutions**
- **Temperature or pressure sterilization**
- **Buffing pads or scrubbing pads**

THESE INSTRUCTIONS AND RECOMMENDATIONS HAVE BEEN PREPARED TO ADVISE THE PROPER METHODS FOR CLEANING YOUR PRODUCT. MAN & MACHINE, INC. OR THE LOCAL DISTRIBUTOR CANNOT ASSUME ANY RESPONSIBILITY FOR THE APPLICATION OF THEM. IF THERE ARE ANY QUESTIONS, PLEASE CONTACT PLACE OF PURCHASE OR MMI PRIOR TO CLEANING.

MAN & MACHINE DOES NOT CONSIDER THE U HOT KEYBOARD TO BE A MEDICAL KEYBOARD FOR INFECTION CONTROL PURPOSES DUE TO THE INABILITY TO MECHANICALLY CLEAN ALL SURFACES AND AREAS ON THE KEYBOARD.

Copyright Man & Machine, Inc. 2008